

M2 – APPENDIX II

Parts List

Appendix II M2 User Guide

NOTE: When ordering parts, please quote the product model, serial number (on underside of fence scales), part number, part description and quantity required.

PART NO.	QUANTITY	DESCRIPTION
31	1	M2 User Guide
180	1	1/2" [12,7mm] Spiral Upcut Bit, HSS
441	1	Guide Rail
451	1	Finger Guide Rail
480	10	Right Hand Finger Bevel Nut
490	10	Left Hand Finger Bevel Nut
7225R	20	Finger Lock Screw
600	10	Right Hand Finger c/w Bevel Nut and Screw
610	10	Left Hand Finger c/w Bevel Nut and Screw
620	1	Right Hand Support Bracket
630	1	Left Hand Support Bracket
641M	1	Millimeter Right Hand Finger Scale Assembly, complete
641	1	Inch Right Hand Finger Scale Assembly, complete
651M	1	Millimeter Left Hand Finger Scale Assembly, complete
651	1	Inch Left Hand Finger Scale Assembly, complete
3110R	4	8-32 x 1/2" Hex Socket, Flat Point Set Screw (Scale Lock)
3156	1	5/64" Hex Key (or 2mm)
671	1	Right Hand Fence Scale, complete
681	1	Left Hand Fence Scale, complete
690	1	Fence Assembly c/w Alloy Plugs
695	2	Side Stop Extension



